

378721


Door Seal Replacement

Removal Procedure

1. Open door to gain access to sealing strip (2).
2. Remove door sealing strip with heat gun or careful scraping.

Important: Ensure that sealing strip removal doesn't scratch door finish.

3. Clean area with suitable solution of isopropyl alcohol 50/50 mixture by volume with water or high flash naphtha.
4. Clean and dry area with dry cloth.

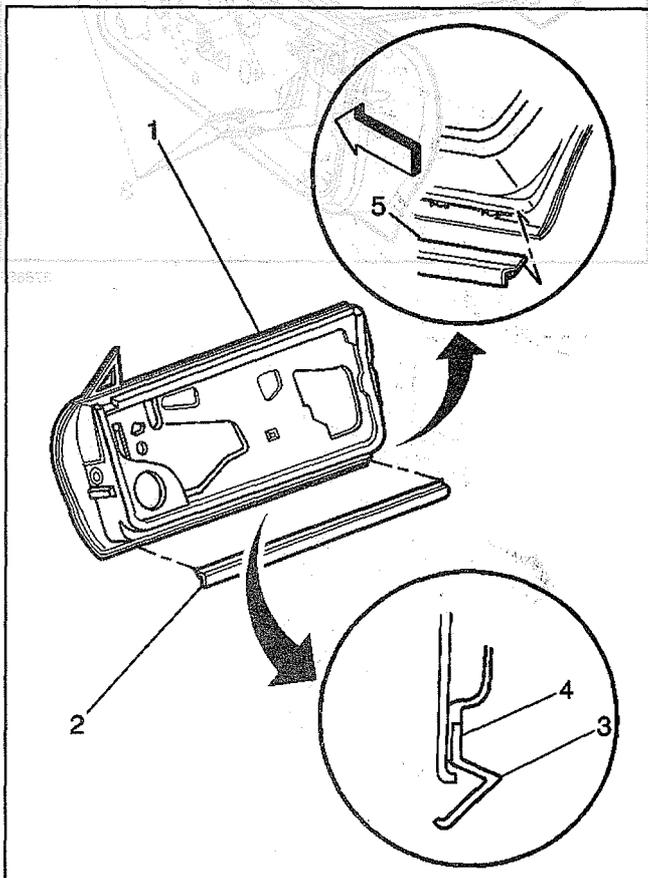

378721

Installation Procedure

1. Install new door sealing strip (2) to door (1).

Important: Temperature must be 95 degrees +/- 5 degrees for proper adhesion of strip to door. If necessary, use heat gun to lightly warm strip prior to installation.

2. Remove protective liner from sealing strip.


Important: Position bottom sealing strip carefully. Sealing strip cannot be removed without reapplying adhesive after contact with vehicle.

3. Align bottom sealing strip to locating feature starting at rear edge of door inner panel.
4. Press bottom sealing strip into place and apply pressure along entire surface.

Weatherstrip Replacement - Door

Removal Procedure


1. Remove body hinge pillar trim panel.
2. Remove windshield side upper garnish molding (1).
3. Remove rear quarter trim panel.
4. Remove roof lift off window (if equipped).
5. Remove lift window body side weatherstrip bolts/screws, if equipped.
6. Remove side door weatherstrip retainers (6).
7. Remove side door weatherstrip by pulling weatherstrip from flange and weatherstrip body retainers (6).

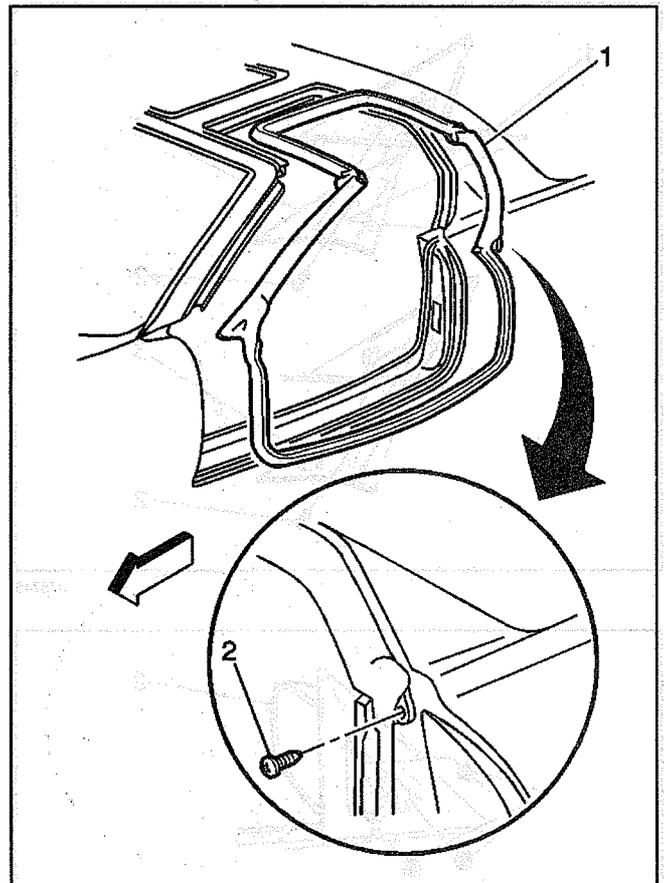

378887

Installation Procedure

1. Install side door weatherstrip by pulling weatherstrip from flange and weatherstrip body retainers.
2. Install side door weatherstrip retainers (6).
3. Install lift window body side weatherstrip bolts/screws (2), if equipped.
4. Install roof lift off window (if equipped).
5. Install rear quarter trim panel.
6. Install windshield side upper garnish molding.
7. Install body hinge pillar trim panel.

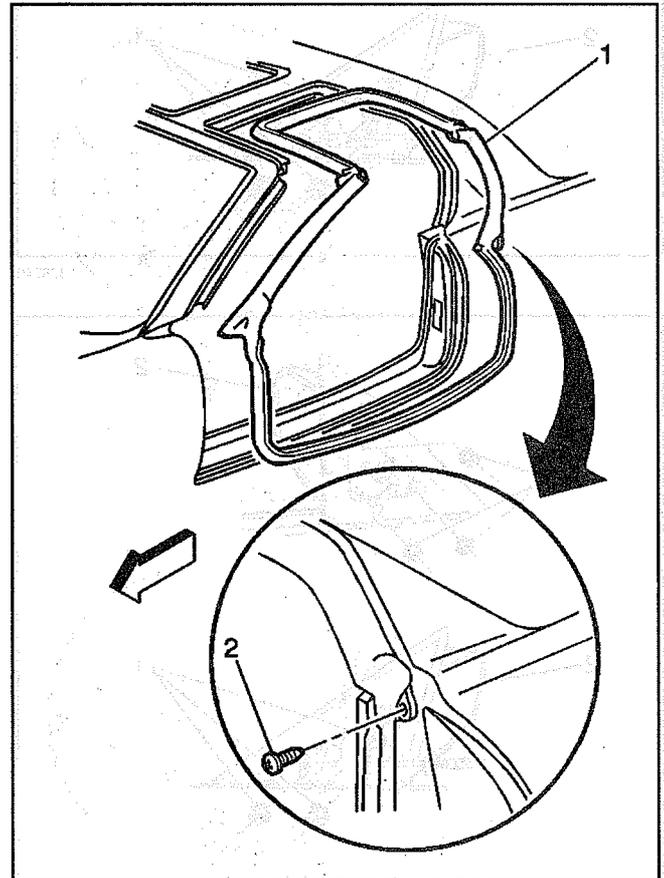

378887