



- 3 EVAPORATOR, AIR CONDITIONING
- 4 CORE ASSEMBLY, HEATER
- 25 SENSOR ASSEMBLY, AIR CONDITIONING EVAPORATOR TEMPERATURE
- 41 BOLT/SCREW, AIR CONDITIONING EVAPORATOR
- 42 CASE ASSEMBLY, TEMPERATURE VALVE
- 43 CLAMP, HEATER CORE TUBE
- 44 CASE, AIR CONDITIONING EVAPORATOR UPPER
- 45 CASE, AIR CONDITIONING EVAPORATOR LOWER
- 46 CASE, AIR DISTRIBUTOR UPPER
- 47 COVER, HEATER AND AIR CONDITIONING EVAPORATOR CASE
- 48 BOLT/SCREW, TEMPERATURE VALVE CASE ASSEMBLY
- 49 BOLT/SCREW, HEATER AND AIR CONDITIONING EVAPORATOR CASE OVER
- 59 BOLT/SCREW, HEATER CORE TUBE CLAMP
- 65 CLAMP, AIR CONDITIONING EVAPORATOR
- 66 SEAL, HEATER PIPE
- 67 BRACKET, HEATER CORE ASSEMBLY
- 68 BOLT/SCREW, HEATER CORE ASSEMBLY

Figure 19 – Air Conditioning Evaporator and Components