


12613

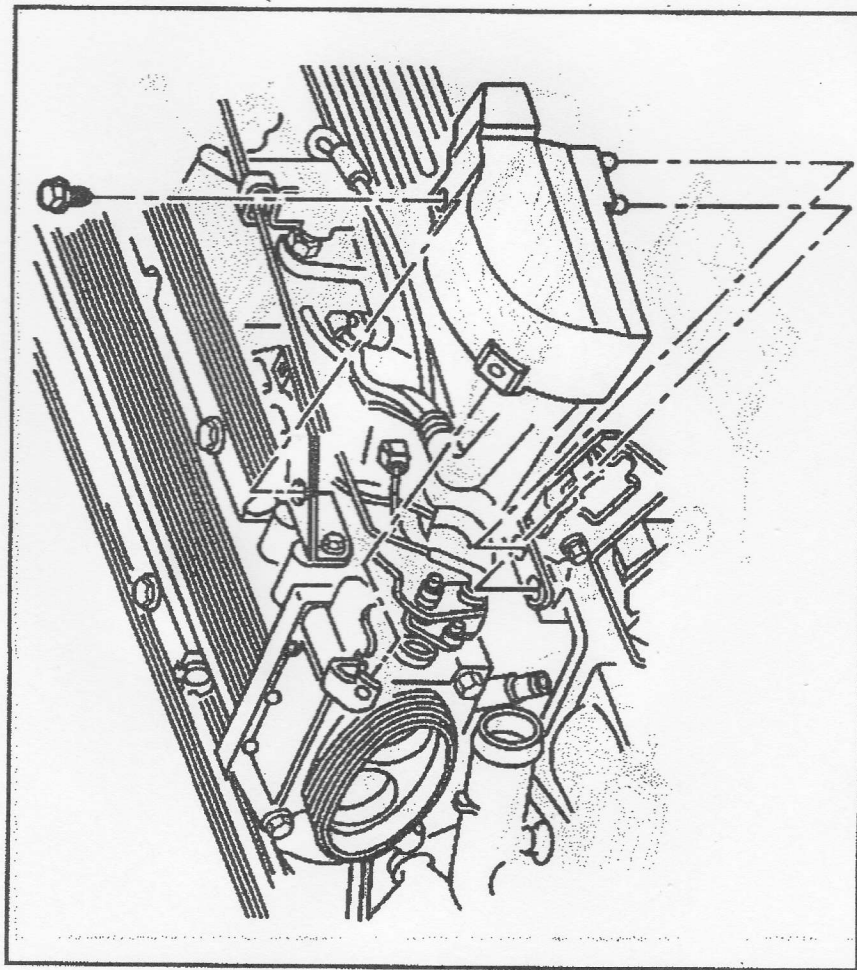

21286

#### 4. Remove the accelerator cable shield.

(NEW)

1. Turn the engine off.

2. Disconnect the

accelerator cable from the throttle linkage.

3. Remove the accelerator cable shield.

4. Reconnect the accelerator cable.

5. Turn the engine on.

6. Check the accelerator cable operation.

7. Adjust the accelerator cable.