



Figure 2 - Cruise Control Switches

4. Lever (1) by pulling it straight out.

Install or Connect

1. Lever (1).
 - Align tang on lever (1) to notch on column (8) and push in until fully seated.
2. Electrical connector.
3. Steering column access cover.
4. Battery negative cable.

CRUISE CONTROL MODULE

Figure 4

The cruise control module (11) is mounted on the left engine compartment inner side rail using two cruise control module bracket bolts/screws (16).

Remove or Disconnect

1. Accelerator control cable splash shield bolts/screws from throttle body, if equipped.

2. Accelerator control cable splash shield from throttle body, if equipped.
3. Left-hand front bumper fascia lower deflector. Refer to SECTION 10-4.
4. Cruise control cover (13) to access connectors.
5. Electrical connector from cruise control module (11).
6. Cruise control cable from cruise control module. Refer to "Cable Replacement" in this section.
7. Bolts/screws (16).
8. Cruise control module (11) with bracket (12) from left engine compartment inner side rail.
9. Bolts/screws (10) attaching cruise control module (11) to bracket (12).
10. Cruise control module (11) from bracket (12).

Install or Connect

NOTICE: Refer to "Notice" on page 9B-1.

1. Cruise control module (11) to bracket (12).