


21189

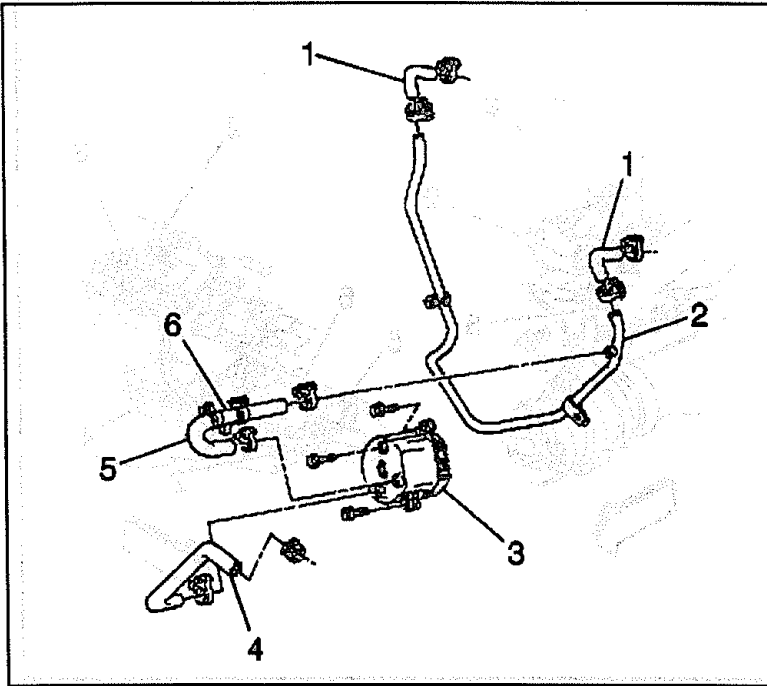

21174

## Air Check Valve and Pipes Cross Under Pipe

### Removal Procedure

1. Loosen the AIR clamps.
2. Remove the AIR hoses (1) to the check valves (both sides).
3. Loosen the AIR clamp at the AIR pump outlet (5).
4. Remove the outlet hose (5) at the AIR pump (3).
5. Raise the vehicle.
6. Remove the fasteners to the AIR cross under pipe (2) bracket, both sides.
7. Cut the cross under pipe near center of the oil pan to aid in removal.
8. Remove the cross under pipe.